
## **METAL BUILDING ROOF CURB**

## MODEL MB1-LO & MB2-LO MODEL MB7-LO & MB8-LO

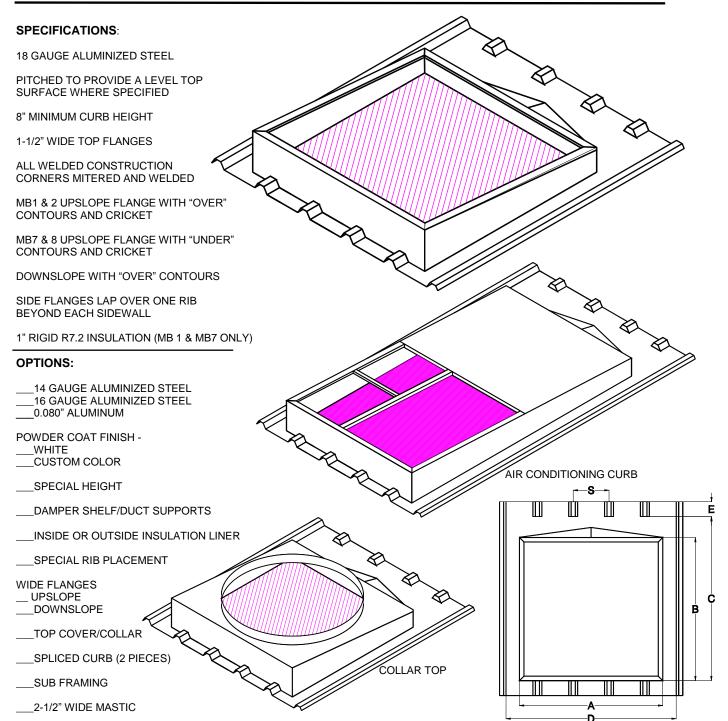

Project	Contractor
Location	Approved By
Date	Date Approved




#### **R&S MANUFACTURING AND SALES COMPANY**

www.RnSsales.com sales@RnSsales.com PHONE 800-423-1619 or 805-375-3980 FAX 805-375-3981

# **INSTALLATION INSTRUCTIONS**

# MODEL MB1 & MB2-LO MODEL MB7 & MB8-LO

- 1. On a fully sheeted roof, mark centerline of roof opening.
- Use centerline of major rib as a guide and lay out roof opening to match the curb A, C, D, & E dimensions.
- Cut roof opening per building manufacturer's recommendations. Slit upslope edges of rough opening (E) for flange clearance at transition point.
- Install structural support framing for curb and equipment loads. Keep inside dimension clear. A minimum of two parallel curb walls should be supported. Avoid cantilever sections in excess of 12".
- Apply mastic or sealant tape at points where curb meets roof panel. Apply to roof panel at curb side, and downslope flanges. Apply to curb upslope flange. Use only accessories as recommended by the building manufacturer.
- Press curb into place on the roof panel. Upslope flange goes under roof panel; sides and downslope over roof panel.
- 7. Fasten the curb to support structure through curb flange and roof panel using fasteners compatible with the roof system. Use a minimum of four fasteners per side on maximum 4" centers.
- Check tightness of fasteners and general integrity of installation. Caulk perimeter edge of curb flanges to roof panel.

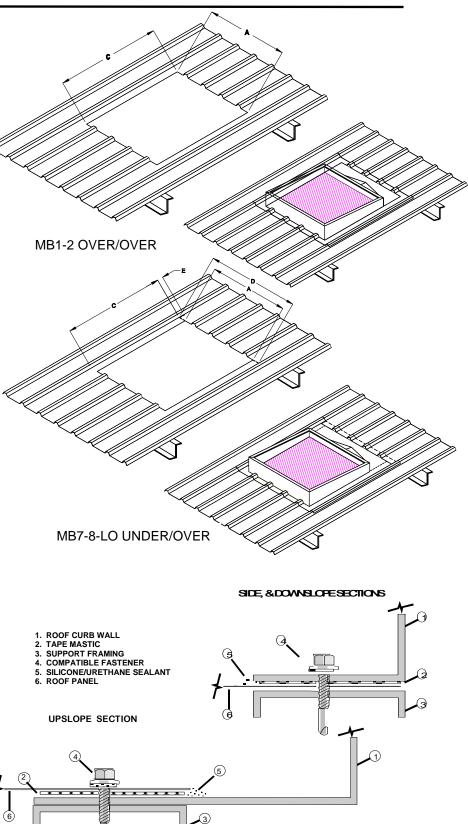



#### **R&S MANUFACTURING AND SALES COMPANY**

www.RnSsales.com sales@RnSsales.com PHONE 800-423-1619 or 805-375-3980 FAX 805-375-3981